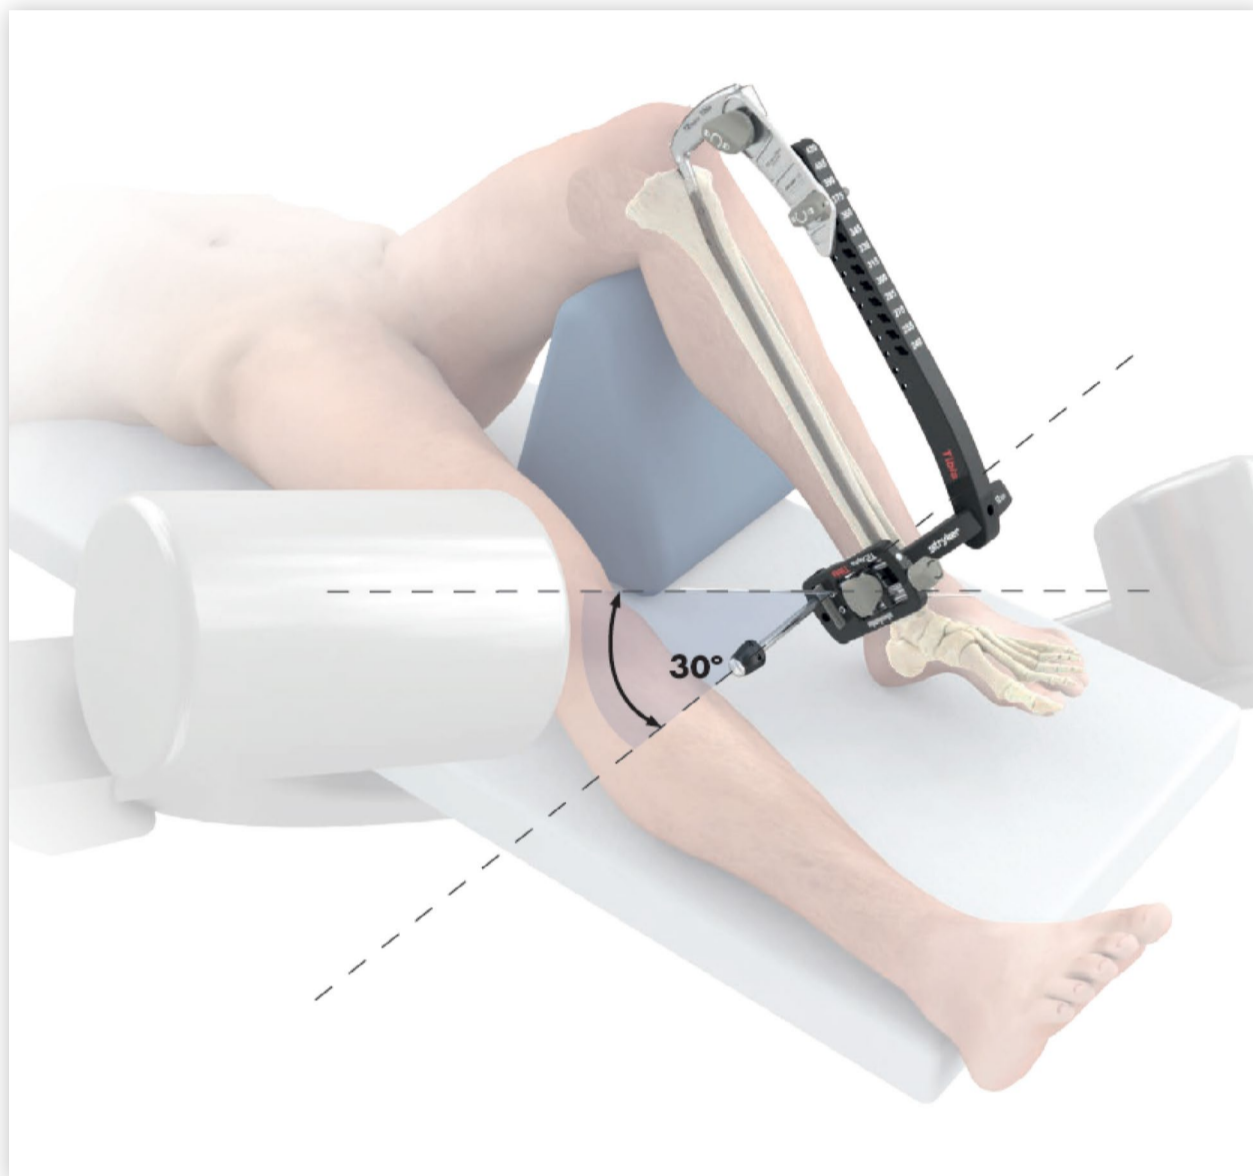


T2 Alpha Tibia Nailing System

C-arm positioning guide

**1**

Oblique positioning of the C-arm

Place the X-ray beam of a C-arm 30° oblique to the axis of the drill sleeve assembly.

A K-wire 3x285mm can be inserted into the more proximal K-wire hole of the adjusting device to indicate the same angle.



Distal end of nail

Drill sleeve tip

